

FIG. 1

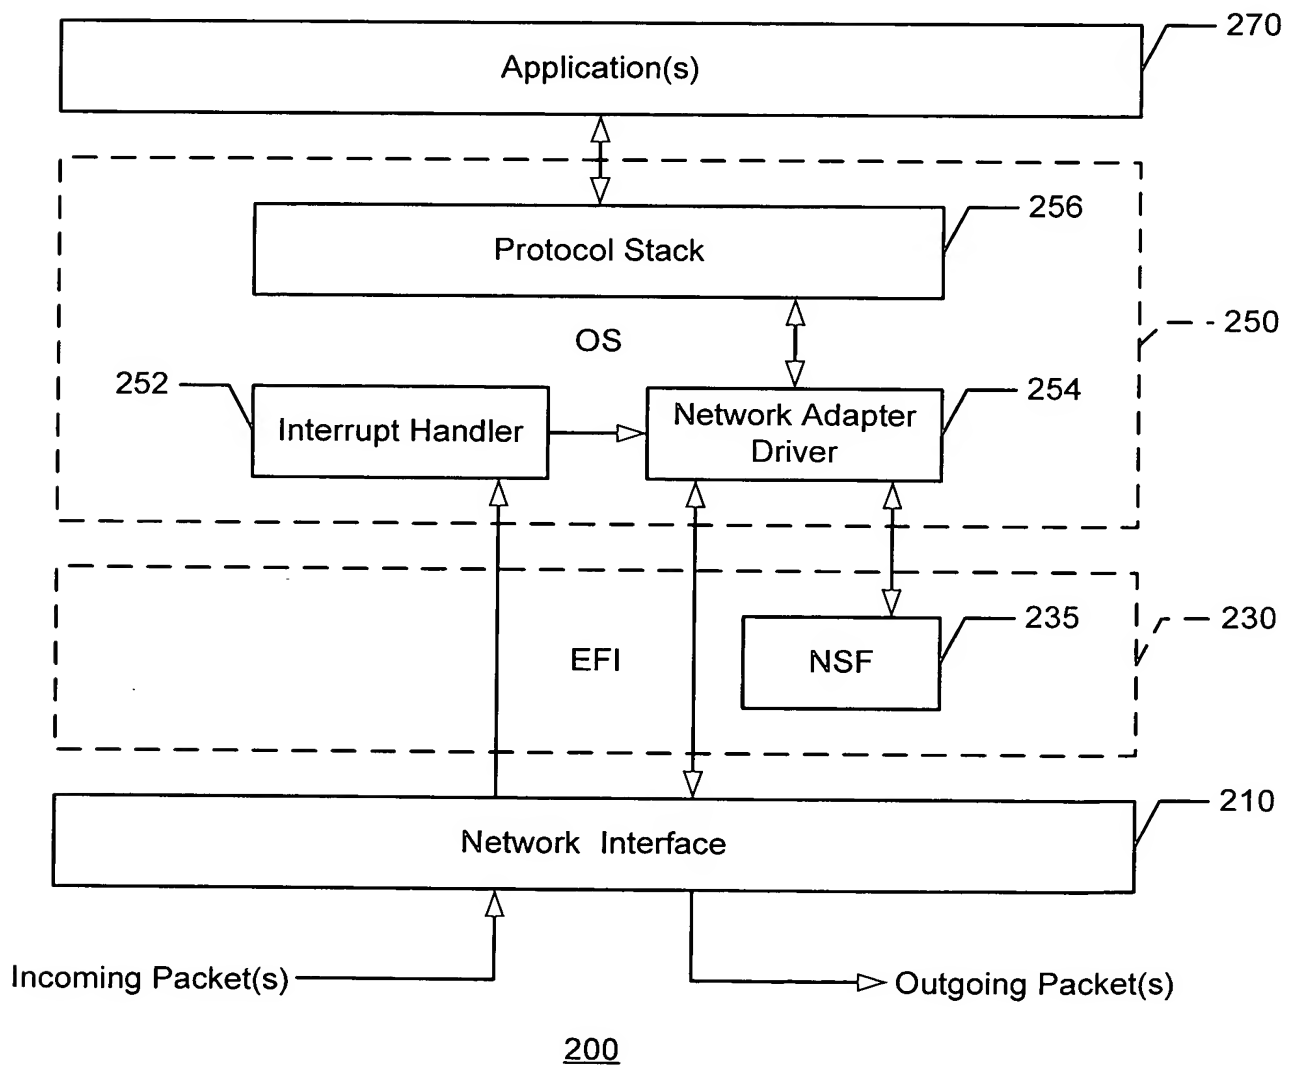


FIG. 2

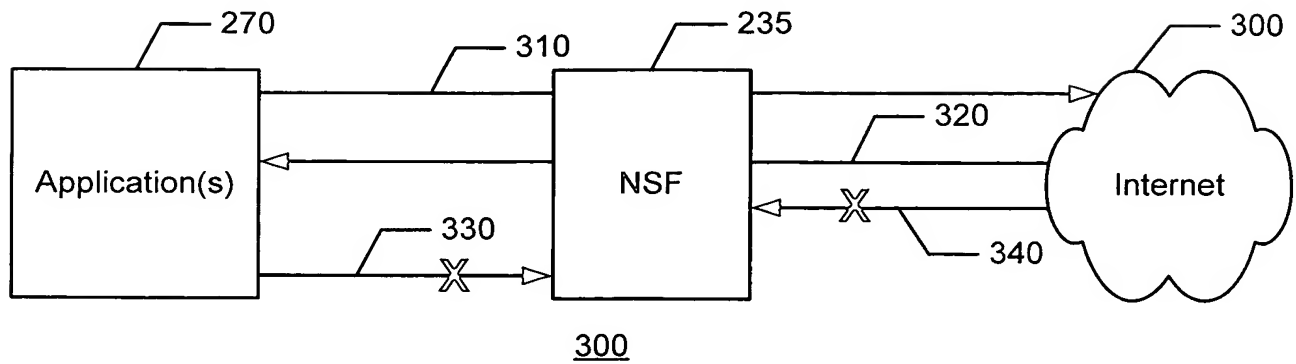


FIG. 3

```
// GUID definition
#define EFI_NETWORK_SECURITY_FIREWALL {DEADBEEF-XXXX-YYY ... ...}
// Revision Number
#define EFI_NETWORK_SECURITY_FIREWALL_REVISION 0x00010000

typedef struct _EFI_NETWORK_SECURITY_FIREWALL{
    UNIT64 Revision;
    EFI_NETWORK_SECURITY_FIREWALL_INIT           FwInit;
    EFI_NETWORK_SECURITY_FIREWALL_DEINIT          FwDeInit;
    EFI_NETWORK_SECURITY_FIREWALL_CHECK_PKT       FwChkPkt;
    EFI_NETWORK_SECURITY_FIREWALL_ADD_RULE        FwAddRule;
    EFI_NETWORK_SECURITY_FIREWALL_DELETE_RULE     FwDelRule;
    EFI_NETWORK_SECURITY_FIREWALL_XXXXXXX        FwXxxxxx;
    EFI_NETWORK_SECURITY_FIREWALL_YYYYYYY        FwYyyyyy;
    ... ..
    EFI_NETWORK_SECURITY_FIREWALL_CONFIG_DATA    ConfigData,
} EFI_NETWORK_SECURITY_FIREWALL;

typedef struct _EFI_NETWORK_SECURITY_FIREWALL_CONFIG_DATA {
    UINT32 Rule ID;
    UINT32 SourceIPAddress;
    UINT32 DestinationIPAddress;
    ... ..
} EFI_NETWORK_SECURITY_FIREWALL_CONFIG_DATA;

// define function pointers
EFI_STATUS
(EFIAPI * EFI_NETWORK_FIREWALL_INIT) (
    IN EFI_NETWORK_SECURITY_FIREWALL_CONFIG_DATA InitData
);

EFI_STATUS
(EFIAPI * EFI_NETWORK_FIREWALL_INIT) (
    VOID
);
```

400

FIG. 4

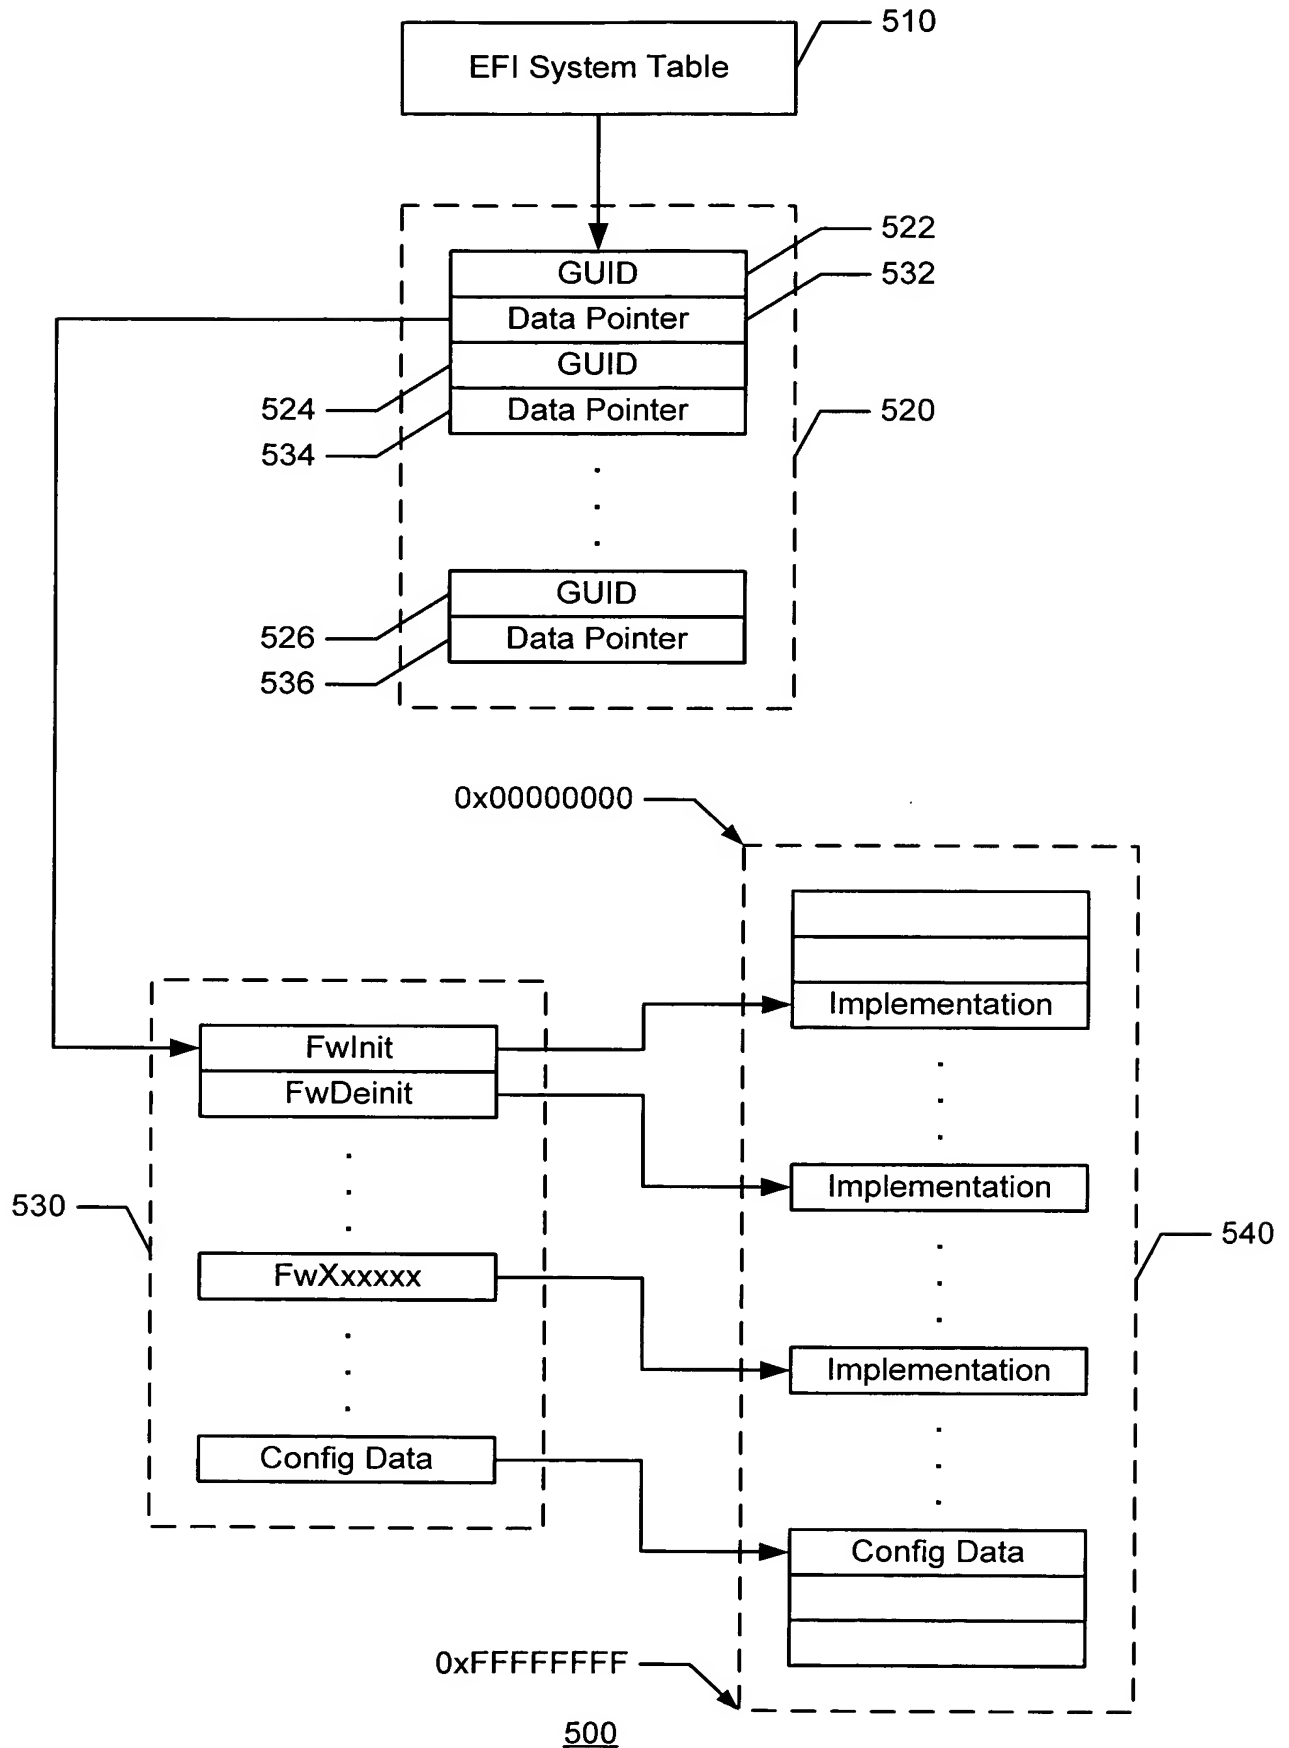


FIG. 5

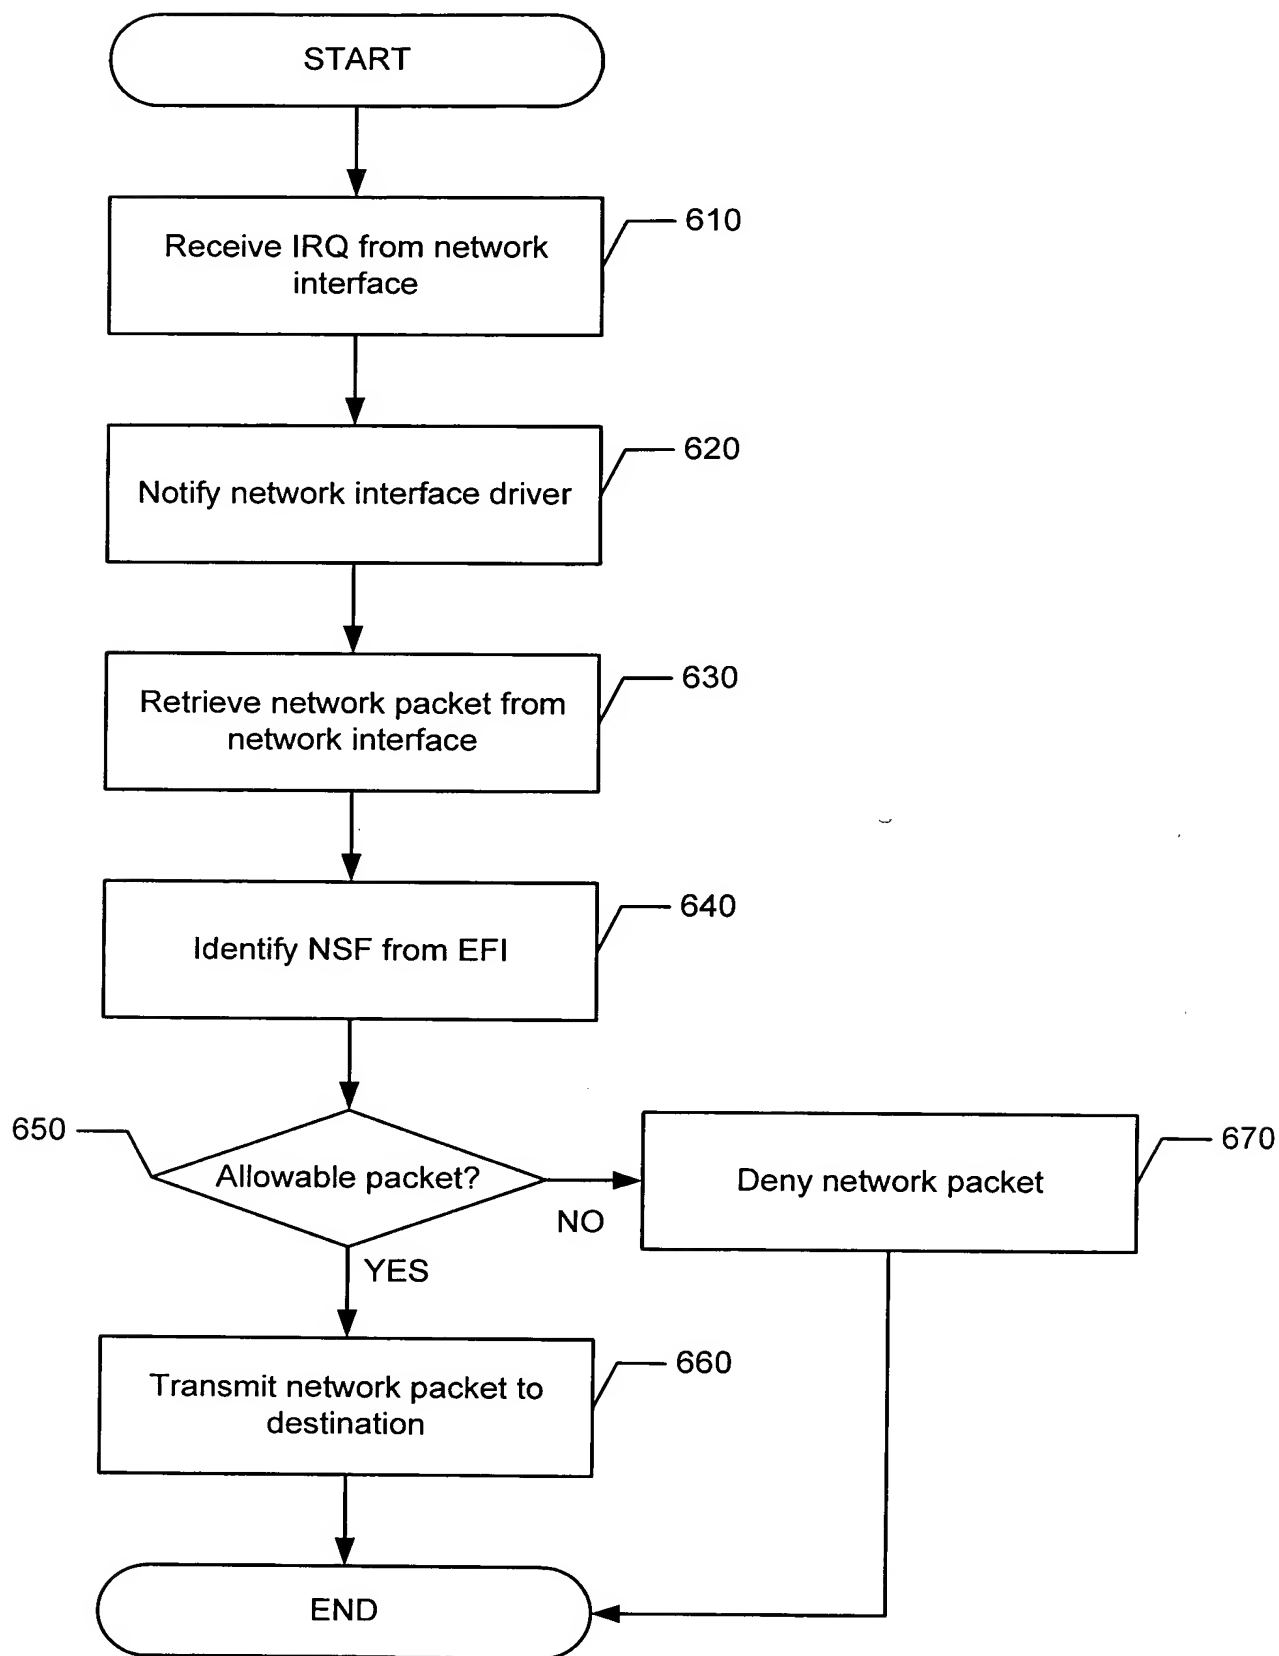


FIG. 6

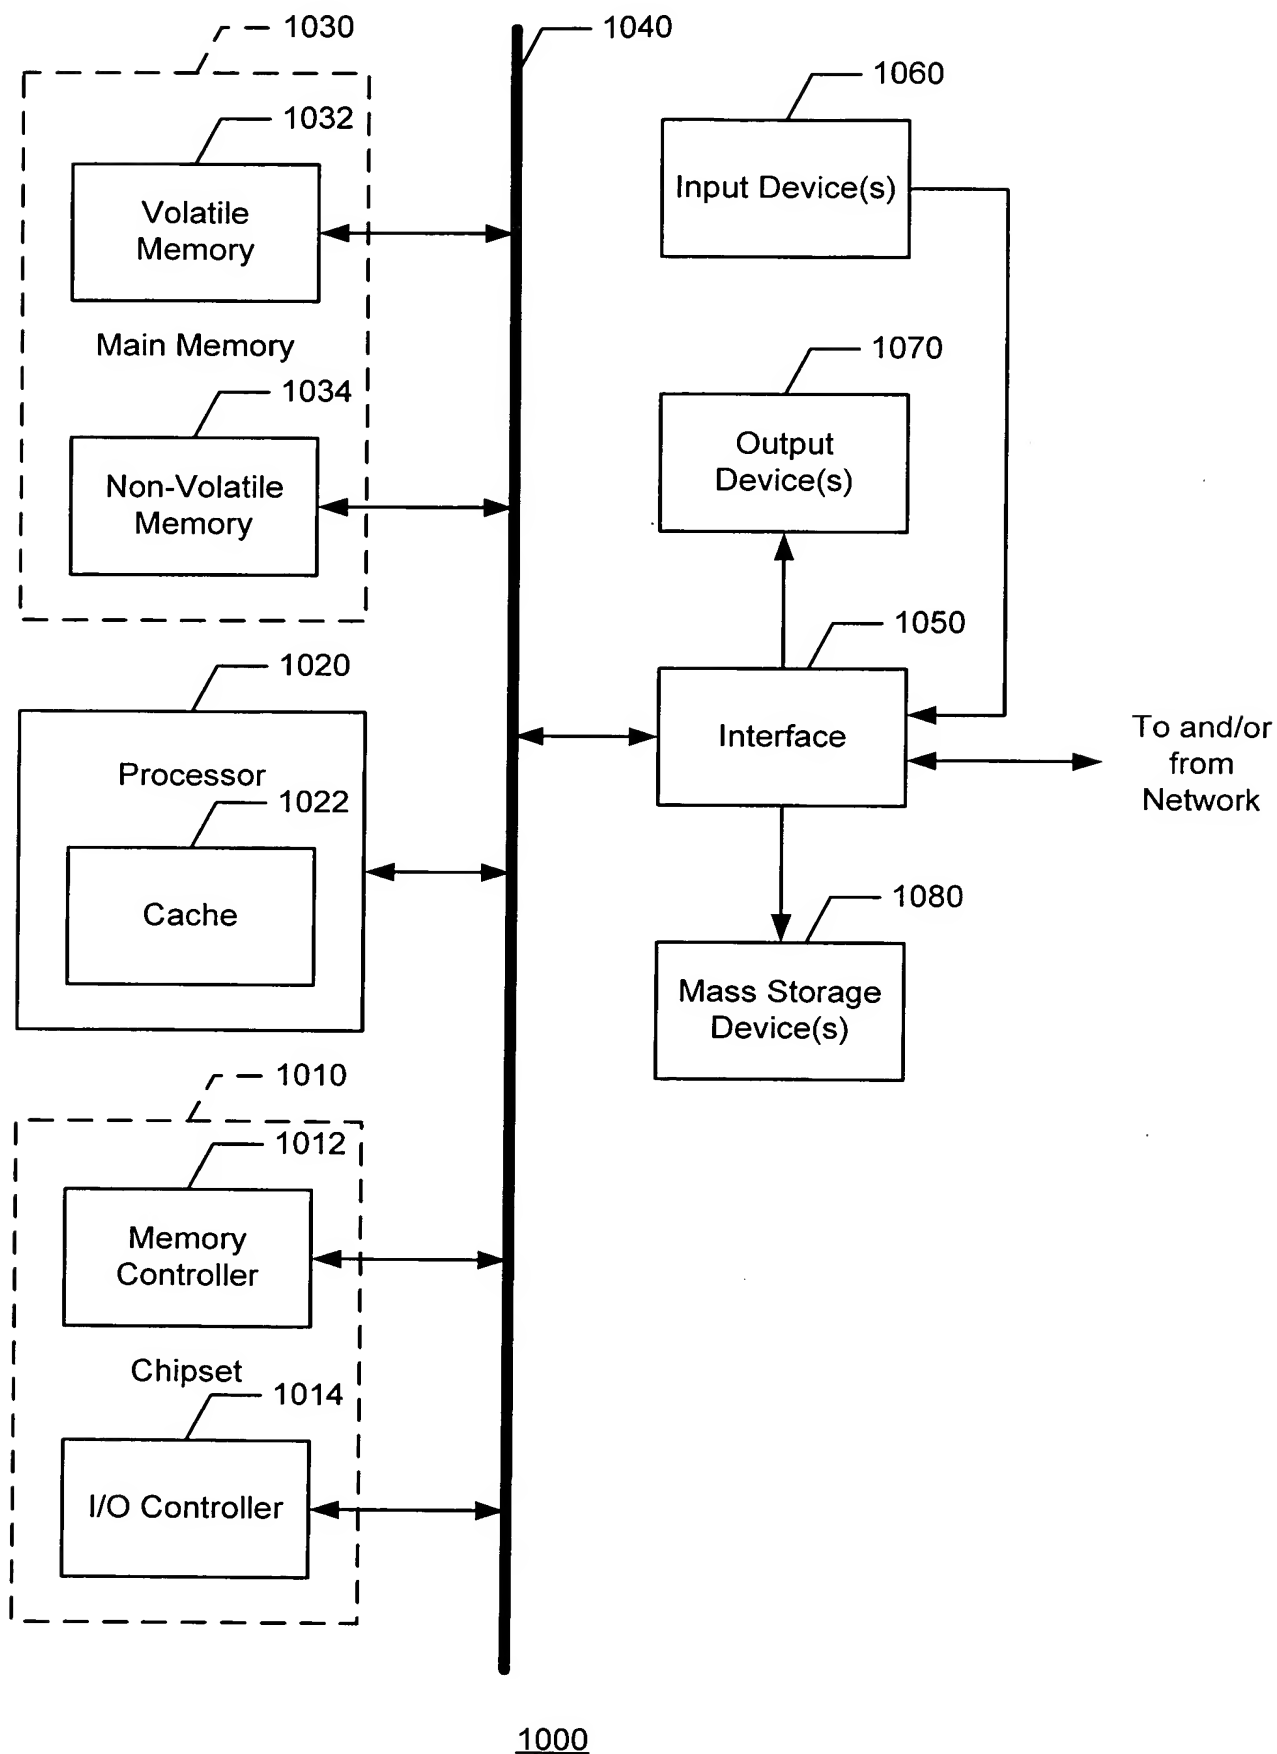


FIG. 7